

Guide to Complete Repair Planning



This guide is owned by and maintained by the Society of Collision Repair Specialists. If you have suggestions to update the guide in future editions, please submit your suggestions to info@scrs.com

The Society of Collision Repair Specialists (SCRS) recognizes that there are many legitimate operations and services our technicians provide that go unrecognized in the estimate development and final billing processes. The purpose of this document is to aid repair facility personnel in formulating the most accurate repair plan in the estimate preparation process, to minimize the need or expense of a supplement. This document is intended to be used as a guide to develop and maintain processes performed in your repair facility, and serves as a reminder of steps that may be performed during the repair process. This document does not suggest, or promote, that your shop can or should charge for each item listed; and is only intended to be a reminder for repair operations that are performed in your facility.

The document does not contain pricing, quantities, labor hours or any additional information as that should be determined based on your facility's individual requirements. All recipients of this document are herewith notified that the materials presented herein are not to be construed as information or direction to take concerted actions. Information can be utilized by individuals acting within their own judgment.





Body
 Paint
 Structural
 Mechanical
 Detail
 Other

Table of Contents:

01.	Bumper	05.	Hood	10.	Fender
15.	Core Support	20.	Radiator / AC & Fluids	25.	Apron & Upper Rail
30.	Wheels, Tires & Align	35.	Suspension / Mechanical	40.	SRS/Seat Belts
45.	Pillars	50.	Rockers	55.	Door Skin / Shell
60.	Roof	65.	Cab Corner, Pickup	70.	Cab Back Panel, Pickup
75.	Quarter Panel	80.	Pickup Bed Side Panel	85.	Van/SUV Side Panel
90.	Deck Lid	95.	Rear Body Panel	100.	Floor
105.	Protection & Safety	110.	Paint Prep	115.	Refinish Process
120.	Color-Sand & Polish	125.	Stripes	130.	Glass
135.	Frame Set Up	140.	Front End Damage	145.	Side Damage
150.	Rear End Damage	155.	Floor Pulling (non structural)	160.	Theft/Vandalism
165.	Detail / Clean-up	170.	Tow, Storage & Administration	175.	Final Bill/Miscellaneous

		Material Sublet Price	Minimum Labor Units
Des	cription	333.3100	
01-	Front and Rear Bumpers:		
1.	FEATHERFILL, SAND AND BLOCK REPAIR AREA		
2.	REMOVE BUMPER MOLDING ADHESIVE		
3.	DRILL FOR LICENSE PLATE		
4.	R&I LICENSE PLATE		
5.	LICENSE PLATE, REPAIR		
6.	LOOSEN/PULL BACK BUMPER COVER		
7.	BUMPER PROMPT DEDUCTION (DETERMINE IF NECESSARY TO ADD BACK OVERLAP + CLEAR)		
8.	R&I FOG LAMPS		
9.	R&I TRAILER HITCH (ON BUMPER)		
10.	AIM FOG LAMPS		
11.	R&I CAMERA AND WIRING		
12.	TRIAL FIT BUMPER		
13.	R&I TRAILER HITCH (FRAME BOLT-ON TYPE)		
14.	R&I OR R&R SENSORS (SRS-AMBEINT TEMP- ETC.)		
15.	REPAIR BUMPER BRACKET AND/OR OTHER COMPONENTS		
16.	REPAIR BUMPER BRACKET MOUNT AREA		
17.	REPAIR ELECTRICAL WIRING TO LAMP LIGHTS		
18.	REFINISH O.E.M "RAW" BUMPER		
19.	REFINISH, SECOND COLOR ON BUMPER COVER		
20.	REFINISH, BLACK-OUT ON BUMPER COVER		
21.	PAINT PREP & CLEAN UP USED BUMPER		
22.	MASK UNPAINTED AREAS ON BUMPER COVER		
23.	MASK BUMPER COVER FOR PRIMER APPLICATION		
24.	FLEXIBLE PARTS ADHESION PROMOTOR APPLICATION		
25.	REPLACE MINI BULBS		
26.	RAW BUMPER PREP KIT		
27.	BUMPER FASTENERS/RETAINERS (KIT)		



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

		T
28.	URETHANE BUMPER REPAIR KIT	
29.	FLEXIBLE PARTS ADDITIVE	
05-	Hood:	
30.	R&I WINDSHIELD WASHER NOSSELS (REPAIR SITUATION)	
31.	R&I HOOD INSULATION	
32.	WINDSHIELD WASHER HOSE RETAINERS (MORE THAN ONE DESIGN)	
33.	REPAIR HOOD LATCH	
34.	REPAIR HOOD HINGES AND/OR HINGE MOUNT AREA	
35.	ACCESS TIME TO REVEAL DAMAGE	
36.	FEATHEREDGE, FILL SAND AND BLOCK (REPAIRED HOOD)	
37.	SEAM SEAL INNER EDGE OF NEW HOOD	
38.	R&I OR R&R HOOD HINGE	
39.	R&I COWL VENT PANEL (ACCESS TO HINGE)	
40.	TEST FIT HOOD	
41.	MIX PAINT FOR UNDERSIDE SECOND COLOR (Add for 3 rd and 4 th Color)	
42.	COLOR TINT & TEST FOR UNDER SIDE SECOND COLOR	
43.	MASK HOOD INNER EDGES	
44.	WINDSHIELD WASHER HOSE FASTENER-S (1 ST DESIGN)	
45.	WINDSHIELD WASHER HOSE FASTENERS (2ND DESIGN)	
46.	HOOD INSULATION RETAINER FASTENERS, REPLACE	
47.	HOOD FRONT SEAL/ FASTENERS	
48.	HOOD REAR SEAL/ FASTENERS	
49.	HOOD LABELS (HOW MANY/WHICH ONES?)	
10 ·	Fender:	
50.	R&I TIRE WHEEL	
51.	R&I FENDER LINER	
52.	R&I FENDER MOLDINGS, EMBLEMS AND FLARE	
53.	R&I MUD FLAP	
54.	R&I ROCKER COVER	
55.	REPLACE ROCKER COVER FASTENERS (TWO DESIGNS?)	
56.	REPLACE FENDER FLARE FASTENERS	
57 .	CLEAN AND RETAPE FENDER MOLDING-S AND EMBLEM	
58.	REPLACE LINER FASTENERS	
59.	FEATHEREDGE, FILL SAND AND BLOCK REPAIRED FENDER	
60.	CAVITY WAX	
61.	REMOVE FACTORY INSTALLED ADHESIVE FOR ACCESS	
62.	ALIGN ADJACENT PANEL-S TO FENDER	
63.	ANTENNA BASE CORROSION, REPAIR	
64.	MASK FENDER JAMS AND OPENINGS	
65.	FENDER MLDG CLADDING PREP FOR "RAW"	
66.	GRAVEL GUARD	
67.	REMOVE STRIPES (ERASER WHEEL)	
68.	FENDER BLACK OUT SECOND COLOR	
15 ·	- Core Support:	
69.	ACCESS/PRE-PULLING	
70.	PROTECT ENGINE COMPARMENT COMPONENTS	
71.	REPAIR CUT WIRING	
72.	AQUIRE RADIO CODE	
73.	RESET MEMORY FUNCTIONS	
74.	MEMORY "SAVER" COLLISION TOOL	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

		 .
75.	REMOVE CAULKING & SEAM SEALER	
76 .	TEST FIT PARTS ATTACHED TO CORESUPPORT	
77.	PULL BACK WIRE HARNESS	
78.	REPAIR WIRE HARNESS FASTENERS	
79 .	CLOSE/SECURE OPEN TUBES AND LINES	
80.	FEATHER AND FILL WELDS AT WELD LOCATIONS	
81.	R&I WHEELS	
82.	R&I ROCKER COVERS AND/OR MUD FLAPS	
83.	R&I FENDERS (ADD FOR SPLASH SHIELDS & FASTENERS)	
84.	R&I ENGINE UNDERCOVER SHIELD	
85.	R&I WINDSHIELD WASHER RESERVOIR	
86.	R&I AC DRIER	
87.	R&I AIR INTAKE DUCTING, AND/OR REPAIR	
88.	R&I RADIATOR OVERFLOW TANK, AND/OR REPAIR	
89.	R&I SECOND BATTERY	
90.	R&I BATTERY TRAY	
91.	R&I COMPONENTS ATTACHED BY WELDING/RIVETING	
92.	REPAIR LEFT AND RIGHT APRON PANELS, AND PAINT	
93.	REPAIR LEFT AND RIGHT UPPER RAILS, AND PAINT	
94.	REPAIR LEFT AND RIGHT FRAME RAIL ATTACHMENT AREA	
95.	AIM LIGHTS	
96.	REMOVE SURFACE CORROSION/ROAD TAR/GREASE	
97.	WRAP MASK WIRE HARNESS	
98.	MASK BAG ENGINE	
99.	MASK A/C LINES-HOSES-HARNESES & COMPONETS	
55.		
	MIX PAINT FOR UNDERSIDE COLOR	
100.	MIX PAINT FOR UNDERSIDE COLOR SECOND COLOR BLACK-OUT	
100. 101.		
100. 101. 102.	SECOND COLOR BLACK-OUT	
100. 101. 102. 103.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS	
100. 101. 102. 103. 104.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING	
100. 101. 102. 103. 104. 105.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS	
100. 101. 102. 103. 104. 105.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES)	
100. 101. 102. 103. 104. 105. 106. 107. 108.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR)	
100. 101. 102. 103. 104. 105. 106. 107. 108.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI Bor)	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI Bor)	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 20 - 113.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER Radiator, AC and Fluids:	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 111. 112. 20 - 113. 114.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 111. 112. 20 - 113. 114. 115.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S)	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 20 - 113. 114. 115. 116.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES	
100. 101. 102. 103. 104. 105. 106. 107. 108. 110. 111. 112. 20 - 113. 114. 115. 116. 117.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES FLUSH LKQ CONDENSER/LINES	
100. 101. 102. 103. 104. 105. 106. 107. 108. 110. 111. 112. 20 - 113. 114. 115. 116. 117. 118.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES FLUSH LKQ CONDENSER/LINES FLUSH LKQ RADIATOR/LINES	
100. 101. 102. 103. 104. 105. 106. 107. 108. 110. 111. 112. 20- 113. 114. 115. 116. 117. 118. 119.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES FLUSH LKQ CONDENSER/LINES FLUSH LKQ RADIATOR/LINES REPAIR AC LINES & TUBES	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 20 - 113. 114. 115. 116. 117. 118. 119.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES FLUSH LKQ CONDENSER/LINES FLUSH LKQ RADIATOR/LINES REPAIR AC LINES & TUBES REPLACE RADIATOR "O"-RINGS (TRANS) REPAIR TRANS COOLER/LINES	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 20 - 113. 114. 115. 116. 117. 118. 119. 120. 121.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES FLUSH LKQ CONDENSER/LINES FLUSH LKQ RADIATOR/LINES REPAIR AC LINES & TUBES REPLACE RADIATOR "O"-RINGS (TRANS) REPAIR TRANS COOLER/LINES REPAIR TRANS COOLER/LINES REPAIR TRANS COOLER/LINES REPAIR TRANS COOLER/LINES REPAIR WIRING/FASTENERS ATTACHED TO FAN SHROUDS	
100. 101. 102. 103. 104. 105. 106. 107. 108. 109. 110. 111. 112. 20 - 113. 114. 115. 116. 117. 118. 119. 120. 121.	SECOND COLOR BLACK-OUT SPOT PAINT LEFT AND RIGHT FRAME AT WELDED AREAS SPOT PAINT/BLEND APRON PANEL DAMAGED BY WELDING REPLACE WIRE HARNESS FASTENERS REPLACE INFORMATION LABELS (DOCUMENT HOW MANY/WHICH ONES) REPLACE HOOD PROP GRUMMET REPLACE CAULKING AT SEAMS UNDERCOAT (SECOND COLOR) CAVITY WAX COBALT DRILL BIT (BORON-TRIP-UZI BOY) COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) WELD-THROUGH PRIMER RADIATOR REPAIR RADIATOR REPAIR FAN SHROUD(S) REPAIR AC CONDENSER/LINES FLUSH LKQ CONDENSER/LINES FLUSH LKQ RADIATOR/LINES REPAIR AC LINES & TUBES REPLACE RADIATOR "O"-RINGS (TRANS) REPAIR TRANS COOLER/LINES	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

124. TEST AC SYSTEM/CONTIMANITES	
125. RECOVER AC FREON	
126. EVACUATE & RECHARGE AC SYSTEM	
127. TEST KIT REFRIGERANT RECOVERY	
128. COOLANT, OEM RECOMMENDED PER GALLON	
129. TRANMISSION FLUID (pint)	
130. STEERING FLUID (pint)	
131. WINDSHIELD WASHER FLUID	
132. R-134 FREON and OIL	
133. O-RING SEAL KIT FOR AC LINES	
25 - Apron/Upper Rail:	
134. PRE-PULL/ACCESS	
135. REMOVE CAULKING & SEAM SEALER	
136. REPLACE CAULKING AND SEAM SEALER (new part)	
137. TEXT COAT, SPRAYABLE SEALER	
138. UNDERCOAT, BLACK	
139. EXPANSION FOAM	
140. CAVITY WAX RUSTPROOFING	
141. WELD-THROUGH PRIMER	
142. TEST FIT ADJACENT PARTS	
143. R&I CRUISE CONTROL UNIT, AND/OR REPAIR	
144. R&I ELECTRONIC CONTROL MODULE, AND/OR REPAIR	
145. R&I AIR INTAKE DUCTING, AND/OR REPAIR	
146. R&I AC TUBING AND HOSE	
147. R&I SRS SENSOR	
148. R&I WINDSHIELD RESERVOIR, AND/OR REPAIR	
149. R&I BATTERY TRAY	
150. R&I FUSE BOX, AND/OR REPAIR	
151. R&I EMISSION CANISTOR AND HOSES, AND/OR REPAIR	
152. R&I CAB INTERIOR COMPONENTS (INNER TRIM, DASH, HEATER BOX / AC, Etc.)	
153. PULL BACK WIRE HARNESS	
154. FEATHER AND FILL CONTOUR REPAIR AREAS	
155. FEATHER AND FILL WELDS	
156. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)	
157. COBALT DRILL BIT (BORON-TRIP-UZI Bor)	
158. REPAIR ADJOINING PANELS DAMAGED BY WELDING	
159. WRAP MASK WIRE HARNESS AT APRON	
160. WRAP MASK ENGINE	
161. SECOND COLOR, ENGINE SIDE (custom color match)	
162. THIRD COLOR, FENDER SIDE (custom color match)	
163. BLACK-OUT ON APRON, SECOND OR THIRD COLOR	
164. UNDERSIDE SECOND COLORS, REFINISH	
30 - Wheels/Tires/Wheel Alignment:	
165. REPLACE VALVE STEMS AND WEIGHTS	
166. MOUNT & BALANCE TIRE	
167. R&I WHEEL COVERS	
168. TIRE DISPOSAL FEE	
169. REPAIR RIM EDGE, POLISH SKUFF MARKS	
170. ROTATE TIRES	
171. RESET TIRE PRESSURE SENSORS (WHEN REPLACING TIRES OR ROTATING FOR ALIGNMENT)	
171. NESET TIME I NESSONE SENSONS (WHEN REPLACING TIRES OR ROTATING FOR ALIGNMENT)	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

172. R&I WHEEL COVERS TO MOUNT ALIGNMENT HEADS	
173. FOUR WHEEL ALIGNMENT	
174. ECENTRIC ALIGNMENT KIT (PER SIDE)	
175. INSPECT SUSPENSION COMPONENTS FOR DAMAGE	
35 - Suspension/Mechanical:	
176. BLEED BRAKES AND ADD FLUID	
177. BLEED BRAKES (ABS)	
178. RESET ABS SYSTEM WITH SCANNER	
179. SHIFT CROSSMEMBER	
180. MEMORY "SAVER" COLLISION TOOL	
181. SHIFT ENGINE CRADLE	
182. ADJUST LINKAGE-S	
183. DRAIN & TRANSFER FUEL	
184. CHECK RUN-OUT ON WHEEL (NEEDED TO FOR BALANCE)	
40 - SRS/Seat Belts:	
185. CLEAN UP DEPLOYED AIR BAG RESIDUE	
186. REPAIR SEAT FRAME	
187. INSPECT SEAT BELTS (IF USED IN LOSS, SHOULD BE REPLACED)	
188. CLEAR SRS FUNCTION CODE ON DASH	
189. INSPECT SRS WIRING	
45 - Pillars:	
190. PRE-PULL PILLAR	
191. REMOVE CAULKING AND SEAM SEALER	
192. REPLACE CAULKING AND SEAM SEALER	
193. EXPANSION FOAM	
194. CAVITY WAX RUSTPROOFING	
195. WELD-THRU PRIMER	
196. FABRICATE PILLAR SLEEVE INSERTS	
197. TEST FIT PARTS ADJACENT TO PILLAR	
198. R&I SEAT TO ACCESS PILLAR REPAIRS/REPLACEMENT	
199. PULL BACK WIRE HARNESS	
200. FEATHER & FILL CONTOUR REPAIR AREA	
201. REPAIR/DRESS WELDS AT FLANGES	
202. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)	
203. WRAP MASK WIRE HARNESS	
204. MASK TO PROTECT INTERIOR	
205. SPOT REFINISH INNER SIDE OF PILLAR	
206. REFINISH SECOND COLOR BLACK-OUT ON PILLAR	
50 - Rockers:	
207. PRE-PULL ROCKER	
208. REMOVE CAULKING & SEAM SEALER	
209. REPLACE CAULKING & SEAM SEALER	
210. EXPANSION FOAM	
211. TEXT COAT	
212. CAVITY WAX	
213. WELD-THRU PRIMER	
214. FABRICATE ROCKER SLEEVE INSERTS	
215. TEST FIT PARTS ADJACENT TO ROCKER	
216. GRAVEL/STONE GUARD (NOTE THE THICKNESS) PER TUBE	
217. R&I SEAT	
Last Undated 04 2011	Dago 6



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

	T	
218. R&I SEAT BELT-S		
219. PULL BACK CARPET AND PADDING		
220. STONE GUARD DECAL		
221. PULL BACK WIRE HARNESS		
222. REPAIR/DRESS WELDS AT FLANGES		
223. REPAIR INNER ROCKER		
224. REPAIR A-PILLAR AT WELD AREA		
225. REPAIR CENTER PILLAR AT WELD AREA		
226. REPAIR FLOOR AT WELD AREA		
227. REPAIR ¼ PANEL AT WELD AREA		
228. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)		
229. COBALT DRILL BIT (BORON-TRIP-UZI Bor)		
230. FEATHER & FILL CONTOUR REPAIR AREAS		
231. WRAP MASK WIRE HARNESS		
232. MASK TO PROTECT INTERIOR		
233. MASK FOR PRIMER APPLICATION		
234. PREP FOR ROCKER PANEL MLDG CLADDING "RAW"		
235. REFINISH INNER ROCKER		
236. REFINISH A-PILLAR		
237. REFINISH CENTER PILLAR		
238. REFINISH FLOOR AREA		
239. REFINISH LOCK POST		
240. REFINISH ¼ PANEL AT WELD AREA		
241. REFINISH BLACK-OUT AT ROCKER		
1 2/2 TEVT COAT DOCKED OUTED (MACKING DECUMED)		
242. TEXT COAT ROCKER, OUTER (MASKING REQUIRED)		
243. TEXT COAT ROCKER, BACK SIDE		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell:		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING		
243. TEXT COAT ROCKER, BACK SIDE 55 - Door Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM)		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS 259. TEST FIT DOOR BEFOR WELD-BONDING		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS 259. TEST FIT DOOR BEFOR WELD-BONDING 260. REPAIR EDGE OF DOOR SHELL, (REMOVAL DISTORTION)		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS 259. TEST FIT DOOR BEFOR WELD-BONDING 260. REPAIR EDGE OF DOOR SHELL, (REMOVAL DISTORTION) 261. RE-BOND INTRUSION BEAM/BELT REINSTALL FLUTTER MATERIAL		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS 259. TEST FIT DOOR BEFOR WELD-BONDING 260. REPAIR EDGE OF DOOR SHELL, (REMOVAL DISTORTION) 261. RE-BOND INTRUSION BEAM/BELT REINSTALL FLUTTER MATERIAL 262. DOOR SKIN BONDING KIT 263. ADJUST/RECALIBRATE POWER DOOR LOCK SYSTEM		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS 259. TEST FIT DOOR BEFOR WELD-BONDING 260. REPAIR EDGE OF DOOR SHELL, (REMOVAL DISTORTION) 261. RE-BOND INTRUSION BEAM/BELT REINSTALL FLUTTER MATERIAL 262. DOOR SKIN BONDING KIT 263. ADJUST/RECALIBRATE POWER DOOR LOCK SYSTEM 264. FEATHER & FILL CONTOUR REPAIR AREAS, (DOOR EDGE)		
243. TEXT COAT ROCKER, BACK SIDE 55 - DOOR Skin/Shell: 244. DISCONNECT AND RECONNECT BATTERY 245. PROTECT INTERIOR FOR PROTECTION 246. ACQUIRE RADIO CODE & PLACE TO OFF POSITION 247. RESET MEMORY FUNCTIONS 248. REMOVE ADHESIVE AT INTRUSION BEAM, BELT REINFORCEMENT & DOOR EDGE 249. REPLACE CAULKING & SEAM SEALER 250. WELD-THRU PRIMER 251. CAVITY WAX 252. FLUTTER BONDING 253. SOUND DEADENER PAD-S 254. CLEAN & RETAPE ADHESIVE DOOR MOLDING 255. REPLACE DOOR EDGE GUARD MOLDING 256. REPAIR VAPOR BARRIER WEATHER SHIELD 257. REPLACE VAPOR BARRIER, (OEM) 258. REPLACE BELT MOLDING FASTENERS 259. TEST FIT DOOR BEFOR WELD-BONDING 260. REPAIR EDGE OF DOOR SHELL, (REMOVAL DISTORTION) 261. RE-BOND INTRUSION BEAM/BELT REINSTALL FLUTTER MATERIAL 262. DOOR SKIN BONDING KIT 263. ADJUST/RECALIBRATE POWER DOOR LOCK SYSTEM		



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

	T	1
267. R&I RAIN SHIELD (VENT SHADE)		
268. R&I WELDED BELT REINFORCEMENT PANEL		
269. R&I SRS AIR BAG		
270. R&I DOOR MIRROR		
271. R&I DOOR GLASS		
272. R&I AIR-SEAL WEATHER STRIP AT PERIMETER (SOME MODELS ONLY)		
273. R&I DOOR CHECK (WHEN SKINNING DOOR)		
274. R&I DOOR LATCH, (WHEN SKINNING DOOR)		
275. R&I DOOR CHECK		
276. R&I DOOR LATCH		
277. R&I DOOR SPEAKER		
278. R&I DOOR GLASS RUN CHANNEL		
279. WRAP/MASK WIRE HARNESS		
280. PREP DOOR CLADDING FOR "RAW" PROCESSING		
281. MASK DOOR OPENINGS & JAMS		
282. WINDOW BLACK OUT AT WINDOW FRAME, (SECOND COLOR)		
283. GRAVEL GUARD		
284. DOOR SKIN BONDING MATERIAL		
285. RECODE DOOR LOCK CYLINDER		
286. DOOR FASTENERS & RIVETS		
287. RR&I LKQ DOORS-CHARGE TO DISASSEMBLE BOTH DOOR		
60 - Roof:		
288. R&I ANTENNA MAST THAT IMPEDES ACCESS		
289. MASK SUN ROOF OPENING/EDGES		
290. R&I ALL INTERIOR AND EXTERIOR (ATTACHMENTS)		
291. PREPAIR FOR WELD BONDING		
292. REPAIR ADJACENT PANELS DISTORTED IN REMOVAL PROCESS		
293. FEATHER & FILL CONTOUR REPAIR AREAS		
294. REMOVE EXPANSION FOAM FROM ROOF REINFORCEMENTS		
295. REMOVE URETHANE RESIDUE ON PINCH WELDS (FULL CUT OUT)		
296. REPAIR DAMAGE TO PINCH WELD FROM GLASS REMOVAL KNIFE		
297. FEATHER & FILL WELDS		
298. REMOVE EXPANSION FOAM		
299. EXPANSION FOAM (PER CAN)		
300. REMOVE PANELS FOR INSTALLATION *		
301. REPAIR ADJACENT REINFORCEMENT PANEL-S		
302. R&I SEAT-S		
303. COVER AND PROTECT INTERIOR		
304. R&I WIRE HARNESS		
305. WELD-THRU PRIMER		
306. CAVITY WAX		
307. REPLACE SOUND DEADENER PADS (Each Pack)		
308. FLUTTER FOAM (Per Tube)		
309. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)		
310. BLEND RIGHT SIDE ROOF PILLARS		
311. BLEND LEFT SIDE ROOF PILLARS		
312. MASK FOR PRIMER APPLICATION		
313. PULLBACK/ROPE/MASK BACK GLASS MOLDING		
314. PULLBACK/ROPE/MASK WINDSHIELD MOLDING		
315. PULLBACK/ROPE/MASK LEFT QUARTER GLASS		



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

316. PULLBACK/ROPE/MASK RIGHT QUARTER GLASS	
317. COBALT DRILL BIT (BORON-TRIP-UZI Bor)	
318. WINDSHIELD INSTALLATION KIT	
319. BACK GLASS INSTALLATION KIT	
320. QUARTER GLASS INSTALLATION KIT	
65 - Cab Corner, Pickup:	
321. PRE-PULL CAB CORNER AS NEEDED	
322. REMOVE CAULKING & SEAM SEALER	
323. REPLACE CAULKING & SEAM SEALER (REPAIR AND REPLACE)	
324. CAVITY WAX	
325. WELD-THRU PRIMER	
326. TEST FIT ADJACENT PARTS AS NEEDED	
327. FABRICATE CAB CORNER SLEEVES	
328. PULL BACK WIRE HARNESS	
329. SOUND DEADENER	
330. R&I SEAT	
331. R&I CARPET AND FLOOR INSULATION	
332. FEATHER & FILL CONTOUR REPAIR AREAS	
333. MASK FOR PRIMER APPLICATION	
334. FEATHER & FILL WELDS	
335. REPAIR ROCKER	
336. REPAIR REINFORCEMENT AND INNER PANEL	
337. MEASURE CAB FOR SQUARE	
338. REPAIR FLOOR	
339. REPAIR GLASS-OPEN FLANGES FROM CUT-OUT KNIFE DAMAGE	
340. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)	
341. PULL BACK /ROPE/MASK BACK GLASS	
342. PULL BACK/ROPE/MASK QUARTER GLASS	
343. REPLACE SOUND DEADENER PAD	
344. TRANSFER WELDED DOOR STRICKER PLATE 345. REFINISH BACK SIDE OF CAB CORNER	
345. REFINISH BACK SIDE OF CAB CORNER 346. MASK WRAP WIRE HARNESS	
340. MASK WRAP WIRE HARNESS 347. MASK/BAG INTERIOR FOR REFINISH	
348. MASK JAMS AND OPENINGS	
349. SPOT PAINT INNER SIDE OF WELDED FLANGES	
350. SPOT PAINT ROCKER	
351. SPOT PAINT BACK PANEL	
352. SPOT PAINT BACK PAINE	
353. GRAVEL GUARD CAB CORNER	
354. BACK GLASS INSTALLATION KIT	
355. QUARTER GLASS INSTALLATION KIT	
70 - Cab Back Panel, Pickup:	
·	
356. PRE-PULL BACK PANEL	
357. REMOVE CAULKING & SEAM SEALER	
358. REPLACE CAULKING & SEAM SEALER	
359. CAVITY WAX COATING	
360. TEXT COAT, (SPRAY SEALER)	
361. WELD-THRU PRIMER	
362. SOUND DEADENER 363. R&I TIRE REPLACMENT TOOLS	
303. Nαι TINE REPLACIVIENT TOOLS	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

364. REPAIR ADJACENT PANELS DAMAGED BY WELDING	
365. R&I SEAT	
366. R&I SEAT BELTS	
367. R&I CARPET AND INSULATION	
368. PULL BACK WIRE HARNESS	
369. FEATHER & FILL CONTOUR REPAIR AREA	
370. FEATHER & FILL WELDS	
371. REPAIR GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE	
372. WRAP MASK WIRE HARNESS	
373. MASK/BAG INTERIOR FOR REFINISH	
374. MASK FOR PRIMER APPLICATION	
375. REFINISH INNER SIDE	
376. SPOT PAINT INNER CAB CORNERS	
377. SPOT PAINT FLOOR	
378. BLACK OUT ON CAB BACK PANEL	
379. CAB CORNER GLASS INSTALLATION KIT	
75 - Quarter Panel:	
•	
380. D&R BATTERY	
381. RESET MEMORY FUNCTIONS	
382. PROTECT INTERIOR FROM REPAIR CONTAMINATION	
383. PRE-PULL QUARTER	
384. REMOVE CAULKING AND SEAM SEALER	
385. REPLACE CAULKING AND SEAM SEALER (Per Tube)	
386. UNDERCOAT AT WHEEL WELL	
387. CAVITY WAX	
388. EXPANSION FOAM (Per Tube)	
389. SOUND DEADENER TEXT COAT WITH SPRAYBLE SEALER	
390. SECOND COLOR BACK-SIDE	
391. WELD-THRU PRIMER	
392. SOUND DEADENER PADS	
393. CLEAN & RE-TAPE GLUE ON MOLDINGS	
394. REPLACE QUARTER W/O MOLDING WITH AFTERMARKET	
395. FABRICATE QUARTER AND ROCKER PANEL SLEEVES	
396. REPAIR WHEEL HOUSE, FROM ADHESIVE DISTORTION DAMAGE	
397. TEST FIT ATTACHING PARTS (TAILLAMPS, GLASSES, ETC.)	
398. PULL BACK WIRE HARNESS	
399. R&I BACK SEAT-S	
400. R&I SEAT BELTS	
401. PULL BACK CARPET & FLOOR INSTULATION	
402. FEATHER & FILL CONTOUR REPAIR AREAS, ROCKER & PILLAR	
403. DOOR OPEN FLANGE BACKSIDE, REPAIR/DRESS WELDS	
404. WHEEL OPEN BACKSIDE WELDS, REPAIR/DRESS	
405. REPAIR DECK LID TROUGH	
406. ROCKER WELDS BACKSIDE, REPAIR/DRESS	
407. REAR BODY PANEL BACKSIDE AT WELD AREA, REPAIR/DRESS	
408. GLASS FLANGE BACKSIDE OF WELD AREA, REPAIR/DRESS	
409. TRUNK FLOOR POCKET WELD AREA REAR OF TIRE, REPAIR/DRESS	
410. GRAVEL GUARD (SPRAY-ON)	
411. STONE GUARD DECAL	
412. REPLACE FOAM ADHESIVE BETWEEN WHEEL HOUSE & QTR	
2.2.2.2.2.3	 1



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

	<u> </u>	T
413. REPAIR GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE		
414. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)		
415. COBALT DRILL BIT (BORON-TRIP-UZI Bor)		
416. CAUTIONARY MEASURES TO PREVENT GLASS MOLDING DAMAGE		
417. MASK WRAP WIRE HARNESS		
418. MASK/BAG INTERIOR FOR REFINISH		
419. MASK QUARTER JAMBS & OPENINGS		
420. MASK FOR PRIMER APPLICATION		
421. SPOT PAINT DOOR OPEN FLANGE, BACKSIDE		
422. SPOT PAINT WHEEL OPEN BACKSIDE WELD AREA		
423. SPOT PAINT ROCKER, BACK SIDE		
424. SPOT PAINT BACKSIDE OF BACK PANEL AT WELD AREA		
425. SPOT PAINT BACKSIDE OF GLASS FLANGE WELD AREA		
426. SPOT PAINT TRUNK FLOOR WELD AREA		
427. REFINISH WELD DAMAGE AREAS (EACH DIRECTION)		
428. REFINISH TWO TONE BLACK-OUT		
429. PULL-BACK/MASK QUARTER GLASS		
430. PULL-BACK/MASK BACK GLASS		
431. PREP QUARTER PANEL CLADDING FOR "RAW" PROCESSING		
432. REPLACE QUARTER GLASS URETHANE INSTALLATION KIT		
433. REPLACE BACK GLASS URETHANE INSTALLATION KIT		
80 - Pickup Bed Side Panel:		
434. PREPULL BED SIDE PANEL		
435. PREPULL BED FLOOR PANEL		
436. STRIP SPRAY-ON BED LINER, COMPLETE		
437. REPLACE SPRAY-ON BED LINER, COMPLETE		
438. STRIP SPRAY-ON BED LINER, PARTIAL		
439. REPLACE SPRAY-ONBED LINER, PARTIAL		
440. R&I REAR BUMPER		
441. R&I BED ASSEMBLY		
442. REPLACE BED BOLTS, AS NEEDED		
443. R&I DROP-IN BED LINER		
444. R&I CAMPER SHELL		
445. R&I TONNEAU COVER		
446. REMOVE CAULKING AND SEAM SEALER		
447. REPLACE CAULKING AND SEAM SEALER		
448. REPLACE SELF LEVELING SEAM SEALER		
449. UNDERCOAT UNDERSIDE		
450. CAVITY WAX		
451. SOUND DEADENER SPRAYABLE SEALER		
452. WELD-THRU PRIMER		
453. TEST FIT PARTS ATTACHED TO BED SIDE		
454. REPLACE BONDING FOAM, UNDERSIDE OF BED RAIL		
455. REPLACE BONDING FOAM, WHEEL-WELL TO BED SIDE PNL		
456. REPLACE FLARE FASTENERS		
457. REPLACE FLARE ADHESIVE SEAL		
458. CLEAN & RETAPE ADHESIVE MOLDING-S		
459. PULL BACK WIRE HARNESS		
460. STONE GUARD DECAL		
461. FEATHER & FILL CONTOUR REPAIR AREA		
	I	1



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

	T	
462. FEATHER & FILL WELDS		
463. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)		
464. LOOSEN AND FREE RUSTED/STUCK BOLTS		
465. REPAIR CAP-RAIL FLANGE, REMOVAL DISTORTION		
466. EXPANSION FOAM (Per Tube)		
467. REPAIR FRONT BED PANEL		
468. REPAIR INNER BED PANEL		
469. REPAIR REAR SILL PANEL		
470. SPOT PAINT INNER BED PANEL		
471. MASK WRAP WIRE HARNESS		
472. MASK BED INTERIOR		
473. MASK FOR PRIMER APPLICATION		
474. SPOT PAINT FRONT BED PANEL		
475. SPOT PAINT REAR SILL PANEL		
476. REFINISH TWO TONE BLACK OUT		
477. GRAVEL GUARD		
85 - Van/SUV Side Panel:		
PRE-PULL SIDE PANEL		
478. CAUTIONARY MEASURES TO PREVENT QUARTER GLASS DAMAGE		
479. GLASS OPEN FLANGE DAMAGE FROM CUT KNIFE, REPAIR		
480. QUARTER GLASS INSTALLATION KIT		
481. REMOVE CAULKING AND SEAM SEALER		
482. REPLACE CAULKING AND SEAM SEALER (Per Tube)		
483. UNDERCOAT SIDE PANEL		
484. CAVITY WAX		
485. WELD-THRU PRIMER		
486. SOUND DEADENER SPRAYABLE SEALER		
487. EXPANSION FOAM (Per Tube)		
488. CLEAN & RETAPE ADHESIVE MOLDINGS		
489. REPLACE WHEEL FLARE FASTENERS & ADHESIVE STRIP		
490. FABRICATE SIDE PANEL SLEEVES		
491. TEST FIT PARTS ATTACHED/ADJACENT TO SIDE PANEL		
492. R&I SPECIALITY INTERIOR		
493. PULL BACK WIRE HARNESS		
494. R&I SEAT-S		
495. R&I SEAT BELT-S		
496. RECOVER FREON (UP TO FOUR POUNDS)		
497. EVACUATE & RECHARGE AC (SEPARATE FROM FRONT A/C)		
498. R&I REAR HEATER/AC COMPONENTS		
499. PULL-BACK CARPET AND FLOOR INSULATION		
500. REAR SILL AT WELD AREA, REPAIR		
501. FILL & FEATHER WELDS		
502. INNER PANEL DISTORTION DUE TO ADHESIVE, REPAIR		
503. WHEEL OPEN INNER STRUCTURE, REPAIR		
504. FILL & FEATHER CONTOUR REPAIR AREAS		
505. COBALT DRILL BIT (BORON-TRIP-UZI BOr)		
506. STONE GUARD DECAL		
507. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)		
508. MASK WRAP WIRE HARNESS		
509. MASK/BAG INTERIOR FOR PROTECTION		
<u> </u>	l	1



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

510. MASK JAMBS & OPENINGS	
511. MASK FOR PRIMER APPLICATION	
512. SPOT PAINT FLOOR AT WELDS	
513. SPOT PAINT BACK SIDE OF ROCKER	
514. SPOT PAINT REAL SILL	
515. ROOF DRIP WELDS, DRESS	
516. REFINISH ROOF	
517. REFINSH TWO TONE BLACK OUT	
518. PREP CLADDING FOR "RAW" PROCESSING	
519. GRAVEL GUARD	
520. PULL BACK/ROPE-MASK SIDE PANEL GLASS MOLDING	
90 - Deck Lid:	
521. ACCESS PULLING & CUTTING, ACCESS TO COMPONENTS	
522. R&I LICENSE PLATE	
523. REPAIR LICENSE PLATE	
524. DRILL FOR LICENSE PLATE BRACKET	
525. REPAIR DECK LID HINGES	
526. REPAIR HINGE MOUNT AREA	
527. TRIAL FIT AND POSITION	
528. R&I AUTO LOCK	
529. REFINISH TWO TONE BLACK OUT	
530. RE-CODE DECK LID CYLINDER	
531. SEAM SEAL INNER EDGE	
532. CAVITY WAX	
533. MINI BULBS	
534. WIRE HARNESS REPAIR	
535. DRILL TEMPLATE FOR SPOILER	
536. LOCK LINKAGE REPAIR	
537. PREP DECK LID CLADDING FOR "RAW" PROCESSING	
95 - Rear Body Panel:	
538. PRE-PULL REAR BODY PANEL	
539. REMOVE CAULKING AND SEAM SEALER	
540. REPLACE CAULKING AND SEAM SEALER	
541. UNDERCOATING REAR BODY PANEL	
542. CAVITY WAX	
543. COBALT DRILL BIT (BORON-TRIP-UZI Bor)	
544. SELF LEAVELING SEAM SEALER	
545. WELD-THRU PRIMER	
546. SOUND DEADENER, SPRAYABLE SEALER	
547. R&I LICENSE PLATE	
548. REPAIR LICENSE PLATE	
549. DRILL FOR LICENSE PLATE BRACKET	
550. MOVE TO PROTECT OR R&I EXHAUST	
551. R&I SPARE TIRE AND TOOLS	
552. TEST FITS PARTS ATTACHED/ADJACENT TO BODY PANEL	
553. FEATHER & FILL CONTOUR REPAIR AREA	
554. BRAZING, COPPER SILIUM MIG BRAZING	
555. FEATHER & FILL WELDS	
556. REPAIR INNER SIDE OF BODY PANEL AT WELD AREAS	
557. REPAIR LEFT QUARTER PANEL REPAIR AT WELD AREA	
	1



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

558. REPAIR RIGHT QUARTER PANEL REPAIR AT WELD AREA	
559. REPAIR FLOOR WELD DAMAGE	
560. REPAIR FLOOR	
561. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)	
562. WIRE HARNESS, REPAIR	
563. WIRE HARNESS FASTENERS, REPLACE	
564. RE-CODE LOCK CYLINDER	
565. PULL BACK WIRE HARNESS	
566. WRAP/MASK WIRE HARNESS	
567. MASK BAG INTERIOR FOR REFINISH	
568. MASK JAMS AND EDGES OF BODY PANEL	
569. SPOT PAINT INNER SIDE OF ADJACENT PANELS AT WELD AREAS	
570. REFINISH BACK SIDE OF BODY PANEL (SECOND COLOR?)	
571. SPOT PAINT TOP SIDE OF FLOOR PANEL	
572. SPOT PAINT UNDERSIDE OF FLOOR PANEL	
573. SPOT PAINT INNER SIDES OF QUARTER PANELS AT WELD AREA	
574. REFINISH TWO TONE BLACK OUT	
100 - Floor:	
575. PRE-PULL FLOOR PANEL	
576. REMOVE CAULKING AND SEAM SEALER	
570. REPLACE CAULKING AND SEAM SEALER (PER TUBE)	
577. REPLACE CAUCKING AND SEALUR (PER TOBE) 578. UNDERCOAT	
578. UNDERCOAT	
580. WELD-THRU PRIMER 581. COBALT DRILL BIT (BORON-TRIP-UZI Bor)	
582. SOUND DEADENER, SPRAYABLE SEALER 583. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence)	
583. COLATERAL DAMAGE FROM THE REPAIR PROCESS (Build Sequence) 584. R&I EXHAUST	
585. R&I SPARE TIRE AND TOOLS	
586. TEST FIT PARTS ATTACHED/ADJACENT TO FLOOR PANEL	
587. R&I ELECTRONIC COMPONENTS AT FLOOR AREA (CD, AMP, SRS, ETC.)	
588. R&I EMMISIONS COMPONENTS AT FLOOR AREA	
589. R&I TRUNK INTERIOR (INDIVIDUAL COMPONENTS)	
590. PULL BACK WIRE HARNESS	
591. EXPANSION FOAM	
592. FEATHER & FILL AREAS ATTACHED BY WELDING	
593. R&I BOLTED SUSPENTION (ALL COMPONENTS)	
594. CROSSMEMBER AT WELD AREA, REPAIR/DRESS	
595. SIDE FLOOR EXTENSIONS, REPAIR	
596. FRAME RAIL FLANGE REPAIR AT WELD AREA	
597. WHEEL HOUSE(S) REPAIR AT WELD AREA	
598. PULL BACK MASK LINES AND CABLES AT FLOOR AREA	
599. R&I FUEL TANK	
600. DRAIN FUEL FROM TANK	
601. WRAP MASK WIRE HARNESS	
602. MASK & PROTECT INTERIOR	
603. REFINISH TOP SIDE OF FLOOR	
604. REFINISH UNDERSIDE OF FLOOR	
605. SPOT PAINT UNDERSIDE ADJACENT PANELS AT WELD AREA	
606. CENTER FLOOR AT WELD AREA, REPAIR/DRESS	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

		1
607. SPOT PAINT CENTER FLOOR AREA		
608. SPOT PAINT CROSSMEMBER		
609. SPOT PAINT FLOOR EXTENSIONS		
610. SPOT PAINT RAILS AT WELD AREA, UNDERSIDE		
611. SPOT PAINT WHEEL HOUSE AT WELD AREA		
612. FLOOR TWO TONE AND/OR BLACK-OUT		
105 - Protection & Safety:		
613. D&R HYBRID BATTERY		
614. HYBRID BATTERY PROTECTIVE STORAGE		
615. D&R BATTERY		
616. RESET ELECTRONIC MEMORY, RADIO		
617. RESET ELECTRONIC MEMORY, SEAT/STEERING WHEEL		
618. DIAGNOSE SRS DISPLAY		
619. DISABLE/ENABLE SRS		
620. DIAGNOSE ALARM CODES		
621. MASK ELECTRONIC CONNECTIONS		
622. R&I FUEL TANK		
623. DRAIN FUEL FROM TANK		
110 - Paint Prep:		
624. REMOVE OIL , TAR & GREASE		
625. REMOVE CORROSION PROTECTION MATERIAL		
626. RESTORE CORROSION PROTECTION		
627. REMOVE MOLDING ADHESIVE		
115 - Refinish Process:		
628. DIFFICULT COLOR, TINTING & TESTING (INACCURATE VARIANCE)		
629. MASK FOR PRIMING		
630. SPOT PAINT CORESUPPORT AFTER INSTALLED (SECOND PAINT)		
631. SPRAY OUT TEST PANEL		
632. SPRAY OUT LET-DOWN PANEL FOR THREE STAGE		
633. SPRAY OUT LET-DOWN PANEL FOR TRANSPARENT COLOR		
634. COLOR TINT & TEST TO BLENDABLE MATCH		
635. COLOR TINT SECOND COLOR		
636. GRAVEL GUARD FIRST PANEL		
637. GRAVEL GUARD SECOND PANEL		
638. GRAVEL GUARD THIRD PANEL		
639. GRAVEL GUARD SPRAY-OUT TEST PANEL		
640. HAZARDOUS WASTE DISPOSAL		
641. UNDERSIDE COLOR TINTING & TESTING (CORESUPPORT & TRUNK AREAS)		
642. UNDERSIDE COLOR REFINISH		
643. COVER VEHICLE (FOR REFINISHING ONE TIME)		
644. REFINISHING JAMBS (SEPARATE COLOR THAN EXTERIOR-EACH COLOR*)		
645. MASKING JAMBS		
120 - Color-Sand & Polish:		
646. COLOR SAND & POLISH, 1 ST PANEL (MATERIALS AND LABOR)		
647. COLOR SAND & POLISH, 2 ND PANEL (MATERIALS AND LABOR)		
648. COLOR SAND & POLISH, 3 RD PANEL (MATERIALS AND LABOR)		
649. COLOR SAND & POLISH, 4 TH PANEL (MATERIALS AND LABOR)		
650. COLOR SAND & POLISH, 5 TH PANEL (MATERIALS AND LABOR)		
651. COLOR SAND & POLISH, 6 TH PANEL (MATERIALS AND LABOR)		
652. COLOR SAND & POLISH, 7 TH PANEL (MATERIALS AND LABOR)		
Last Undated 04 2011	I	Dago 1F



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

TH	
653. COLOR SAND & POLISH, 8 TH PANEL (MATERIALS AND LABOR)	
654. FINAL WASH TO REMOVE COMPOUND RESIDUE	
655. POLISH RIM SKUFF	
656. SPOT REFINISH RIM	
125 - Stripes:	
657. REMOVE OLD STRIPES (WITH ERASER WHEEL)	
658. RESTRIPE WITH FINE-LINE TAPE	
659. RESTRIPE PAINTED-ON	
660. FACTORY STRIPE INSTALLATION	
130 - Glass:	
661. CAUTIONARY STEPS TO PREVENT DAMAGE	
662. REPAIR FLANGE DAMAGE FROM CUT KNIFE	
663. TEST FIT GLASS	
664. REMOVE URETHANE RESEDUE AT PINCHWELD, FULL CUT OUT	
665. BROKEN GLASS CLEAN-UP (SEATS & CARPET)	
666. BROKEN GLASS CLEAN-UP (VENTS / R&I Dash Needed?)	
667. URETHANE GLASS KIT	
135 - Frame Set Up:	
668. UNIBODY CLAMP SYSTEM	
669. FULL FRAME CLAMP SYSTEM	
670. NON-DRIVE VEHICLE (NO START)	
671. DISABLED VEHICLE (NO STANT)	
672. LIFTED/LOWERED VEHICLE	
673. TRAM VEHICLE TO DETERMINE IF MOVEMENT EXISTS	
674. INSTALL MECHANICAL MEASURING SYSTEM	
675. ELECTRONIC MEASUREMENT DOCUMENT	
676. R&I ROCKER MLDGS- ACCESS TO CLAMP AREA	
677. ACCESS PULLING TO FACILITATE TEAR DOWN	
678. R&I INTERFERING WIRES, TUBING/LINES, EXHAUST	
679. R&I SUSPENSION/STEERING, PARTIAL	
680. REPAIR CLAMP SCARING ON ROCKER FLANGE	
681. REPAIR ANCHOR DAMAGE AT LOCKING POINTS	
682. REPAIR PROTECTIVE COATING AT ROCKER	
683. PAINT ROCKER FLANGE	
140 - Front End Damage:	
684. PRE-PULL TO FACILITATE TEAR DOWN	
685. PULL & REPOSITION CORESUPPORT	
686. REPAIR FRONT BUMPER WELDED MOUNTING BRACKET (EACH)	
687. CORRECT UPPER RAIL/APRON SWAY, LEFT	
688. CORRECT UPPER RAIL/APRON SWAY, RIGHT	
689. CORRECT UPPER RAIL/APRON SWAY, RIGHT	
690. CORRECT UPPER RAIL/APRON HEIGHT, LEFT	
691. CORRECT UPPER RAIL APRON LENGTH/MASH, LEFT	
692. CORRECT UPPER RAIL APRON LENGTH/MASH, RIGHT	
693. REPAIR AND CORRECT DIAMOND CONDITION	
694. MEASURE SUSPENSION 605. DOSITION AND ALIGN EDONT CROSSMEMBER	
695. POSITION AND ALIGN CENTER CROSSMEMBER	
696. POSITION AND ALIGN CENTER CROSSMEMBER	
697. POSITION AND ALIGN REAR CROSSMEMBER 698. R&I COMPONENTS MOUNTED TO APRON-S	
Last Undated 04 2011	Dago 16



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

699. LOOSEN BRACKETS FOR PULL AND REPAIR	
700. REPAIR LEFT LEAF SPRING BRACKET/SHACKLE	
701. REPAIR RIGHT LEAF SPRING BRACKET/SHACKLE	
702. PULL LEFT RAIL, SWAY	
703. PULL RIGHTRAIL, SWAY	
704. PULL LEFT RAIL LENGTH	
705. PULL RIGHT RAIL LENGTH	
706. REPAIR LEFT RAIL MASH (CUT OUT MASH TO REPAIR)	
707. REPAIR RIGHT RAIL MASH (CUT OUT MASH TO REPAIR)	
708. PULL LEFT RAIL HEIGHT	
709. PULL RIGHT RAIL HEIGHT	
710. CORRECT LEFT RAIL TWIST	
711. CORRECT RIGHT RAIL TWIST	
712. PULL ENGINE/SUSPENSION CROSSMEMBER	
713. PULL & POSITION APRON, LEFT	
714. PULL & POSITION APRON, RIGHT	
715. PULL & POSITION STRUT TOWER, LEFT	
716. PULL & POSITION STRUT TOWER, RIGHT	
717. VECTOR INWARD RAIL TWIST (EACH RAIL)	
718. R&I ENGINE (FOR ACCESS)	
719. R&I TRANSMISSION (FOR ACCESS)	
145 - Side Damage:	
720. ACCESS PULLING TO FACILITATE TEAR DOWN	
721. PULL & POSITION COWL FOR REPAIR	
722. PULL & POSITION COWETON REPAIR 722. PULL & POSITION DASH REINFORCEMENT BAR	
723. PULL & POSITION PILLAR, OUTBOARD (EACH OF A,B & C PILLARS)	
724. PULL & POSITION PILLAR, REARWARD (EACH OF A,B & C PILLARS)	
725. PULL & POSITION FILLAR, FORWARD (EACH OF A,B & C PILLARS)	
726. PULL & POSITION PILLAR, TWIST (EACH OF A,B & C PILLARS)	
727. SQUARE DOOR OPENING (TRIAL FIT DOOR AS NEEDED)	
728. PULL & POSITION ROCKER	
729. PULL & POSITION ROCKER 729. PULL & POSITION CENTER FLOOR	
730. LOOSEN FULL FRAME BRACKETS	
731. CORRECT PILLAR INNER REINFORCEMENT (EACH OF A,B & C PILLARS)	
731. CORRECT PILLAR INNER PANEL (EACH OF A,B & C PILLARS)	
733. CORRECT FILLAR INVER PAINE (EACH OF A, B & C FILLARS)	
734. CORRECT ROCKER INNER PANEL	
735. PULL QUARTER PANEL POST	
736. PULL/CORRECT PACKAGE TRAY AREA	
·	
150 - Rear End Damage:	
737. ACCESS PULLING TO FACILITATE TEAR DOWN	
738. REPAIR REAR FRAME RAIL WELDED BRACKET (EACH SIDE)	
739. REPAIR REAR LEAF SPRING BRACKET/SHACKLE (EACH SIDE)	
740. PULL & POSITION REAR BODY PANEL	
741. PULL REAR FLOOR PAN, LENGTH	
742. PULL REAR FLOOR PAN, LEVEL	
743. PULL LEFT RAIL, LENGTH	
744. PULL RIGHT RAIL, LENGTH	
745. PULL LEFT RAIL, SWAY	
746. PULL RIGHT RAIL, SWAY	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

747. PULL LEFT RAIL, HEIGHT	
748. PULL RIGHT RAIL, HEIGHT	
749. PULL LEFT RAIL, TWIST	
750. PULL RIGHT RAIL, TWIST	
751. PULL & POSITION REAR CROSSMEMBER	
752. PULL & POSITION LEFT QUARTER (FOR REPAIR)	
753. PULL & POSITION RIGHT QUARTER (FOR REPAIR)	
754. PULL & POSITION LEFT INNER QUARTER STRUCTURE	
755. PULL & POSITION RIGHT INNER QUARTER STRUCTURE	
756. PULL & POSITION SUSPENSION MOUTING POINTS	
757. CORRECT DIAMOND CONDITION	
758. CORRECT RAIL PERCH AT SPRING MOUNT AREA	
759. REMOVE TWIST IN CENTER SECTION OF FULL FRAME	
760. CORRECT BODY/CAB MOUNTS	
761. CORRECT BODY TO FRAME ISOLATOR MOUNTS	
762. MEASURE SUSPENSION CONTROL POINTS	
763. CORRECT BED MOUNTS	
764. PULL & POSITION BED X-MEMBER	
765. PULL & POSITION BED FLOOR	
766. PULL & POSITION BED SIDE PANEL, OUTER (FOR REPAIR)	
767. PULL & POSITION BED INNER PANEL	
768. PULL & POSITION BED FRONT PANEL	
769. CORRECT TAIL GATE OPENING, SQUARE	
770. CORRECT RAIL MASH	
771. CORRECT BUMPER BRACKET MOUNT AREA	
772. VECTOR REPAIR INWARD RAIL TWIST (EACH RAIL)	
·	
772. VECTOR REPAIR INWARD RAIL TWIST (EACH RAIL) 155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP	
155 - Floor Anchor Pulling System: (light hits, no structural)	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism:	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINGER	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINGER 788. CODE DOOR CYLINDER	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINGER 788. CODE DOOR CYLINDER 165 - Detail/Clean-Up:	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINGER 788. CODE DOOR CYLINDER 165 - Detail/Clean-Up: 789. DETAIL PACKAGE (LEVEL 1-2-3-4)	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINDER 788. CODE DOOR CYLINDER 165 - Detail/Clean-Up: 789. DETAIL PACKAGE (LEVEL 1-2-3-4) 790. PAINT SEALANT (COMPLETE) LIFETIME WARANTY	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINGER 788. CODE DOOR CYLINDER 165 - Detail/Clean-Up: 789. DETAIL PACKAGE (LEVEL 1-2-3-4) 790. PAINT SEALANT (COMPLETE) LIFETIME WARANTY 791. PAINT SEALANT (PER PANEL)	
155 - Floor Anchor Pulling System: (light hits, no structural) 773. FLOOR ANCHOR CLAMP SYSTEM SET UP 774. FLOOR PULL CORESUPPORT 775. FLOOR PULL APRON 776. FLOOR PULL UPPER RAIL 777. FLOOR PULL QUARTER LOCK POST/DOG LEG 778. FLOOR PULL QUARTER WHEEL HOUSE 779. FLOOR PULL BACK PANEL 780. FLOOR PULL BUMPER MOUNT AREA 160 - Theft/Vandalism: 781. DETAIL/CLEANUP 782. MECHANICAL CHECK 783. ROAD TEST 784. CHECK FLUIDS AND LAMPS 785. TOP OFF FLUIDS 786. COPY KEY FROM CYLINDER 787. CODE IGNITION CYLINDER 788. CODE DOOR CYLINDER 165 - Detail/Clean-Up: 789. DETAIL PACKAGE (LEVEL 1-2-3-4) 790. PAINT SEALANT (COMPLETE) LIFETIME WARANTY	



Body
 Paint
 Structural
 Mechanical
 Detail
 Other

794. CLEAN UP DEPLOYED AIR BAG RESIDUE	
170 - Tow, Storage & Administration:	
795. TEAR DOWN CHARGE	
796. RR&I ALL LKQ/USED COMPONETS (DISASSEMBLY OF BOTH DAMAGED AN DONOR PART)	
797. INSIDE STORAGE	
798. OUTSIDE STORAGE	
799. ADMINISTRATIVE FEE	
800. ADMINISTRATIVE FEE (NUMEROUS ATTEMPTS TO DEAL WITH DIFFICULT PARTIES)	
801. ADVANCED CHARGES	
802. TOW FEE TO DEALER	
803. TOW FEE BACK FROM DEALER, RETURN	
804. IMMOBILE VEHICLE OR PART, YARD SERVICE FEE (FORK LIFT USE)	
805. INOPERATIVE VEHICLE (NO START/NO KEYS)	
806. RELOCATION FEE	
807. VEHICLE PICKUP SERVICE FEE	
808. FLUID SPILL CLEAN UP FEE (ADD FOR ABSORBENT MATERIAL)	
809. VEHICLE DISPOSAL FEE	
810. RESTOCKING FEE'S	
811. PROTECT INTERIOR (ADD FOR PLASTIC WRAP MATERIAL)	
812. CUSTOMER ASSISTANCE FEE (GATHERING OF PERSONAL ITEMS)	
813. AFTER HOURS RELEASE FEE	
814. PRICE PER POUND ON ALL RECOVERY DISPATCHES	
815. VEHICLE PROCESSING FEE (DMV)	
175 - Final Bill/Miscellaneous:	
816. SHIPPING/TRANSPORTATION CHARGES	
817. TIRE DISPOSAL FEE	
818. CASH DISCOUNT	
819. BATTERY DISPOSAL FEE	
820. OIL DISPOSAL FEE	
821. VISUAL DAMAGE ESTIMATE (NO-REPAIR/O.R.CUSTOMER)	
822. FINAL BILL, AUTHORIZATION TO PAY SECURED	
823. NEED TEAR DOWN FOR COMPLETE ESTIMATE	